



```

***** SPICE MODELING by JIM THOMPSON, http://www.analog-innovations.com/ © 2015 *****
.SUBCKT VoltageControlledInductor TOP BOT ControlPos ControlNeg PARAMS: LREF=1mH
L_L1 N_2 BOT {LREF}
E_E1 TOP N_2 VALUE {V(ControlPos,ControlNeg)*V(N_2,BOT)}
.ENDS VoltageControlledInductor
    
```

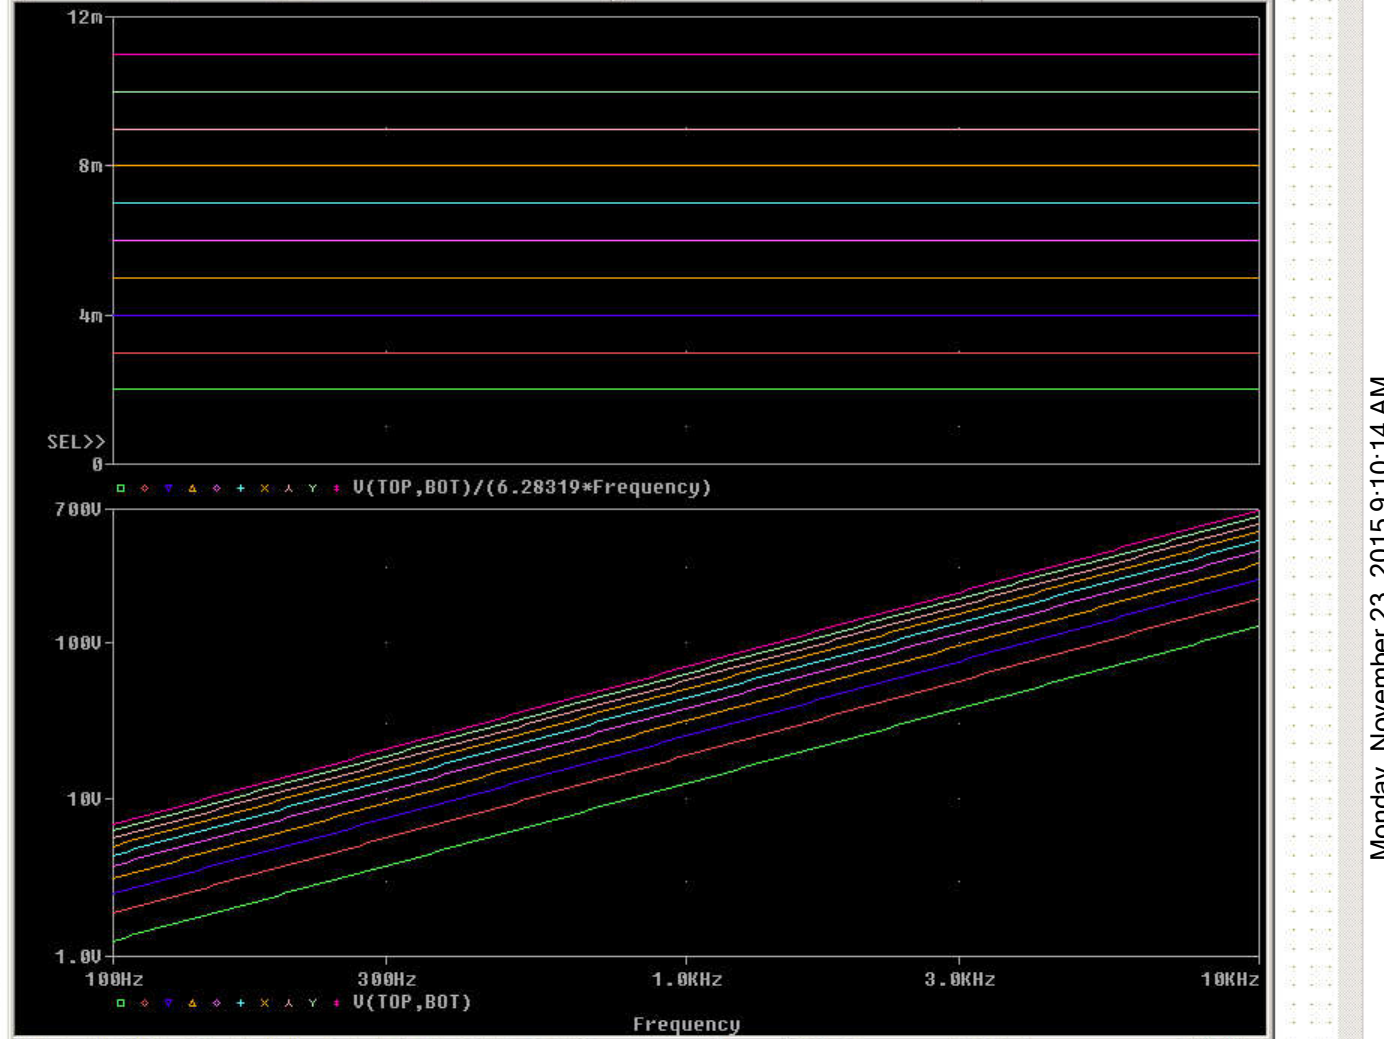

ANALOG INNOVATIONS
 35129 N LAREDO DR
 SAN TAN VALLEY, AZ 85142-3361
 (480) 460-2350 FAX: (602) 657-0890

Title: Spice Model for Voltage-Controlled Inductor	
Size	FileName:
A	..\InductorModeling\VoltageControlledInductorModel.sch
REV	A
November 23, 2015, 7:31 AM	Sheet 1 of 1